
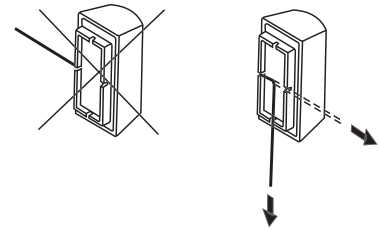
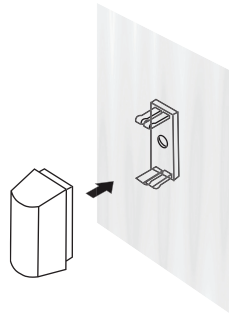
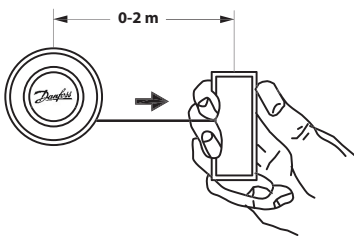
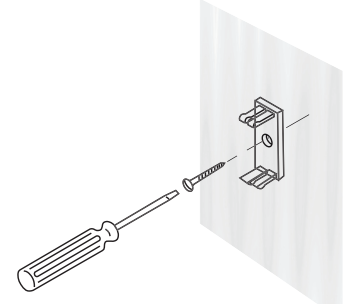
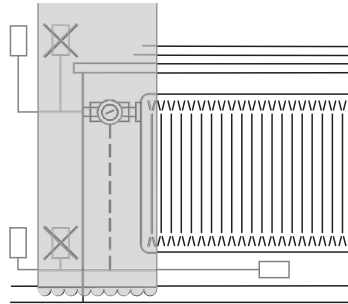
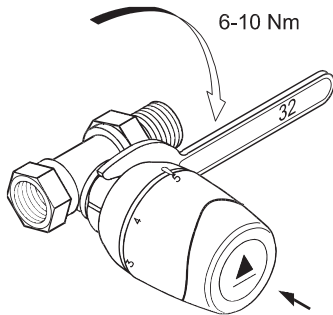
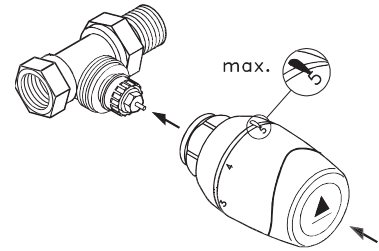





013R9318

013R9318

- Ⓟ Montaż głowicy
- Ⓡ Montage термостатического элемента
- Ⓡ Postawienie na termostatyczny element
- Ⓢ Монтажа термостатског элемента
- Ⓡ Montarea elementelor termostatic
- Ⓢ Termostaatelemendi monteerimine
- Ⓡ Termostatiskā elementa pievienošana
- Ⓡ Termostatinio elemento montavimas
- Ⓡ Fitting of thermostatic element

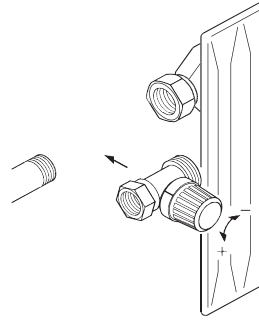

 - Ⓟ Dokonywanie ustawień
- Ⓡ Настройка температуры
- Ⓡ Настройка
- Ⓢ Подешавање
- Ⓡ Reglare
- Ⓢ Reguleerimine
- Ⓡ Uzstādīšana
- Ⓡ Nustatymas
- Ⓡ Setting

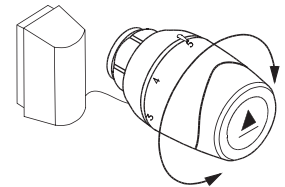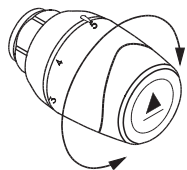

- Ⓟ Ograniczenie min. i max.
- Ⓡ Мин. и макс. ограничение
- Ⓡ Мин. и макс. ограничаване
- Ⓢ Мин. и макс. ограничавање
- Ⓡ Limitarea min. și max.
- Ⓢ Min ja max piiritlemine
- Ⓡ Minimālā un maksimālā robeža
- Ⓡ Min ir max apribojimas
- Ⓡ Min. and max. limitation

